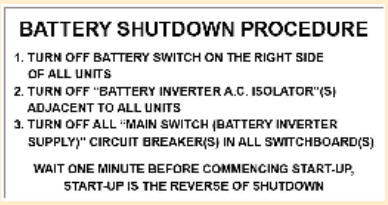
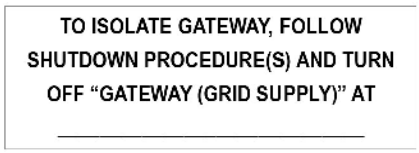

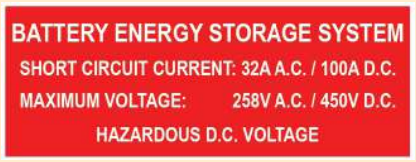
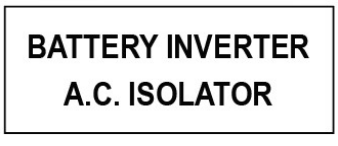
PV-BATTKIT-TESLA Installation Guide

LABEL	LOCATION	STANDARD
	Located on or adjacent to the main metering panel and main switchboard, so as to be readily visible.	AS5139:2019 Cl 7.3
	Located adjacent tothe PCE to which the battery is connected and be visible from the equipment to be operated.	AS5139:2019 Cl 7.16
	Located adjacent to the gateway on the right hand side or inside the gateway about the main isolator.	Tesla Install Guide 2021
	Located in the switchboard to which the IES is directly connected	AS4777.1:2016 Cl 6.2
	Located in the switchboard to which the IES is directly connected	Tesla Install Guide 2021
	Located in the main switchboard and any DB warning of a multimode IES with standalone functionality.	AS4777.1:2016 Cl 6.11

Issue Date: 31/03/22 Revision Date: 31/03/22 Authorised by: PV Connections

PV-BATTKIT-TESLA Installation Guide

LABEL	LOCATION	STANDARD
	Located adjacent to any stand alone circuits IF not in it's own stand-alone DB	Tesla Install Guide 2021
	Located adjacent to enclosure where the battery system is located	AS5139:2019 Cl 7.6
	Located in the switchboard to which the BESS is connected	Tesla Install Guide 2021
	Located in the switchboard to which the BESS is connected	Tesla Install Guide 2021
	Located on the A.C. Isolator connected to the BESS	Tesla Install Guide 2021
	Located on the right hand side of the Powerwall	Tesla Install Guide 2021

PV-BATTKIT-TESLA Installation Guide

LABEL	LOCATION	STANDARD
POWERWALL	Located in the switchboard to which the BESS is connected	Tesla Install Guide 2021
GATEWAY GRID SUPPLY	Located adjacent to the Gateway Grid Supply switch	Tesla Install Guide 2021
GATEWAY STAND ALONE PORT	Located adjacent to the Gateway Grid load side CB	Tesla Install Guide 2021
MAIN SWITCH BATTERY INVERTER SUPPLY	Located adjacent to the Main Switch of the Battery Inverter	AS4777.1:2016 Cl 6.2
MAIN SWITCH STAND ALONE CIRCUITS	Located adjacent to Gateway, load side CB if in MSB	Tesla Install Guide 2021
STAND ALONE CIRCUIT	Located adjacent to any single stand alone circuit IF not within it's own stand-alone DB	Tesla Install Guide 2021